



Akja Coupling Device



Compact and safe coupling device to attach an Akja directly to the tow-bar of a snowmobile.

The coupling device can be attached directly to the original pole-attachments of the Akja and is locked with the bayonet locking.



NEW: Easily attachable by a **detachable fixing plate**.

Due to the direct attachment to the snowmobile, the **Akja is guided very stable**. Lateral, multidirectional movable guiding skis at the coupling device increase the tilting stability.

A hinge in the towing bar separates the movements of the snowmobile from the Akja. Thanks to this, the up and down or declining movements of the snowmobile are kept away from the Akja.

The coupling device can be **folded up** and stored at the safety bow of the snowmobile. Thus, the snow mobile can be operated without the disadvantages of a trailer. Only if it is necessary, the coupling device is taken from its storage and the Akja can be safely attached to it.

Suitable for all TYROMONT Akja models, due to the newly developed universal poles the coupling device could also be used with older Akja versions.

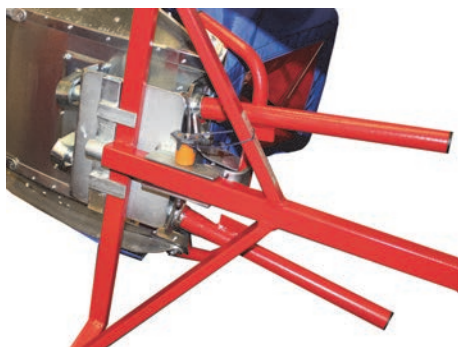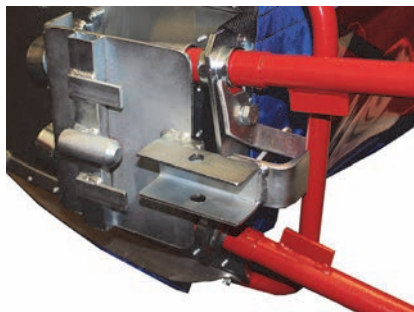

Art. No.	93061	
Dimensions	Length:	1.100 mm
	Width:	970 mm
	Height:	440 mm
Weight	11,5 kg	
Comments	To protect the injured person in the rescue sled, Akja Windshield Cover is highly recommended (Art. 93063).	